



F Cord Tensioner Installation
Essential for child safety

Lower the shading. Choose one of the three installation methods shown to position the tension device on the window frame or the wall so that the tension device and the control cord do not interfere with shade operation.

The control cord must be taut but still operable. Do not allow for any slack. Do not twist or cross the control cord.

Follow bracket installation instructions enclosed.

INSTALLATION METHODS

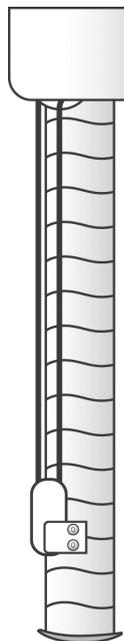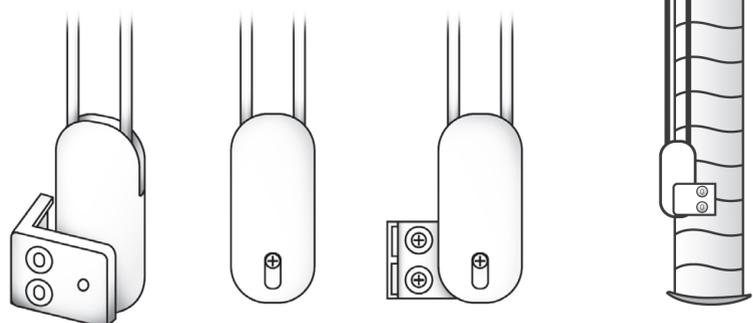

G Hold Down Installation (optional)



Use the pin on the hold down bracket to punch out the front hole on the bottom rail end cap.

Mount the hold down to the side or back of the window frame so that the pin lines up with the front hole in the bottom rail end cap with the shade fully lowered and fully open.

Lower the shading and flex the hold down bracket outward so that the pin can be inserted into the hole in the end cap.

INSIDE MOUNT

OUTSIDE MOUNT

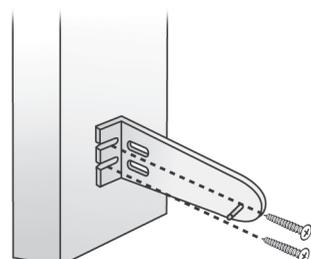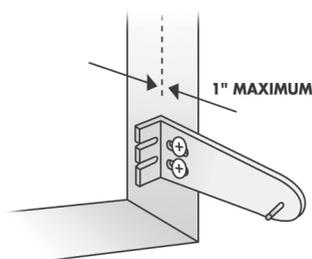

Child Safety



The Consumer Product safety Commission requires the use of a cord tie down (cord tensioner) on all continuous loop cord systems. The use of such a device is intended to significantly reduce the occurrence of infant or small child strangulation injuries or deaths resulting from the looped pull cords on various window treatment products.

The Cord Tensioner is installed on the Lift Cord before packaging. The Tensioning device should be mounted in the proper position to pull the cord taut in order to reduce the possibility of injury.

Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

Light Filtering = X / Room Dimming = O

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer	Spot Cleaning	Water Immersion	Ultrasonic Cleaning
X	X	X				X
O	O	O				

GREATWINDOWS

FROM NEXT DAY BLINDS



Savannah Window Shadings

INSTALLATION INSTRUCTIONS

*meticulously made
by hand in our
Great Windows factory*




8251 Preston Ct., Jessup, MD 20794
www.greatwindows.com

1-800-556-6632

A Getting Started

The Parts: Before starting, please remove and identify the following parts required for the installation of your shades:

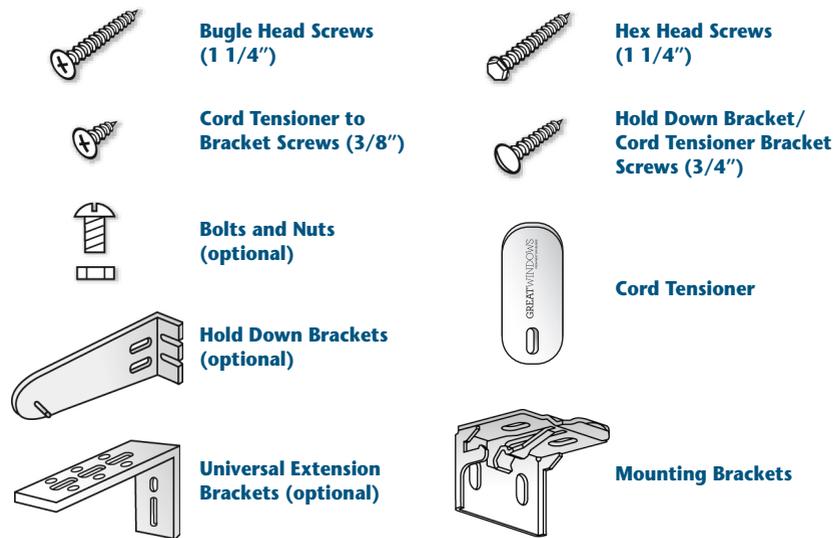

B The Tools

To install your Great Windows™ Savannah Shadings, you will need a few basic tools:

- Phillips head screwdriver*, or
- 1/4" nut driver*

* Power screwdriver or power drill with #2 Phillips attachment or 1/4" nut driver attachment may be used.


Important Note: Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wall-board or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.

C Sorting Your Shades

On top of the headrail of your Great Windows™ Savannah Shading there is a sorting label. This appears as seen below:


On this label you will recognize:

1. Order size of the shade.
2. Room location (If not present, info not given at time of order)
3. Whether the shade was ordered for inside mount (IB), outside mount (OB), or side mount (EM).

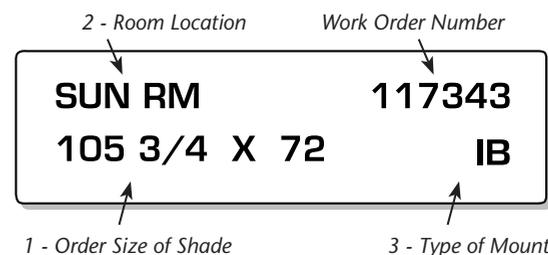


D Bracket Installation

If Ordered as Inside Mount (IB)

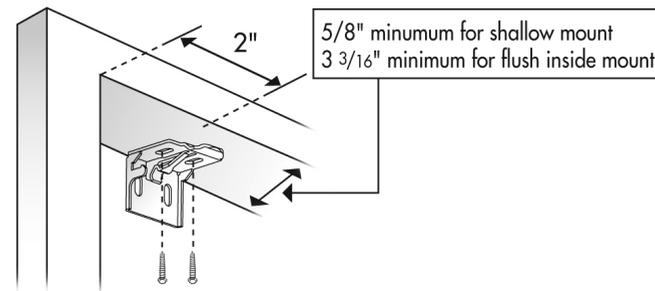


If Ordered as Outside Mount (OB)

Important Note: Make sure your mounting surface is level. If the headrail does not sit level, the fabric will not roll up evenly which could damage the edges of the fabric.

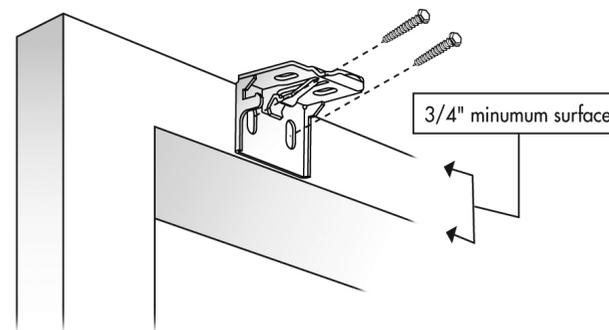


If Ordered as Outside Mount with Extension Brackets (optional)

Extension Brackets are used to project the back of the shadings up to 2 1/2" from the mounting surface. Attach the Standard Mounting Bracket to the Extension Bracket with the nut and bolt provided (Fig. 1).

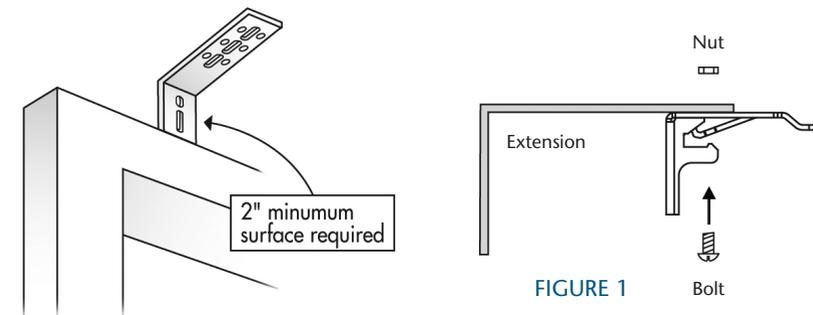


If Ordered as Side Mount (EM)

1. Position screw in center of slot so you can adjust position of bracket as necessary.
2. Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown (Fig. 1). Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Standard Mounting Brackets using the nuts and bolts provided (Fig. 2).

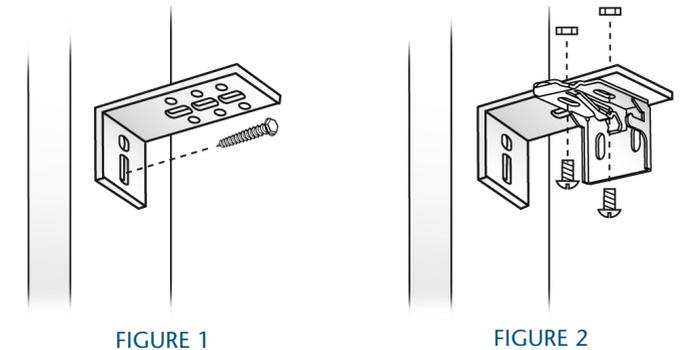

E Installing Your Window Shadings into the Brackets

The integrated headrail system used on your Savannah Shading is designed to eliminate the need for a separate snap on valance, and to provide the aesthetic enhancement of concealed brackets.

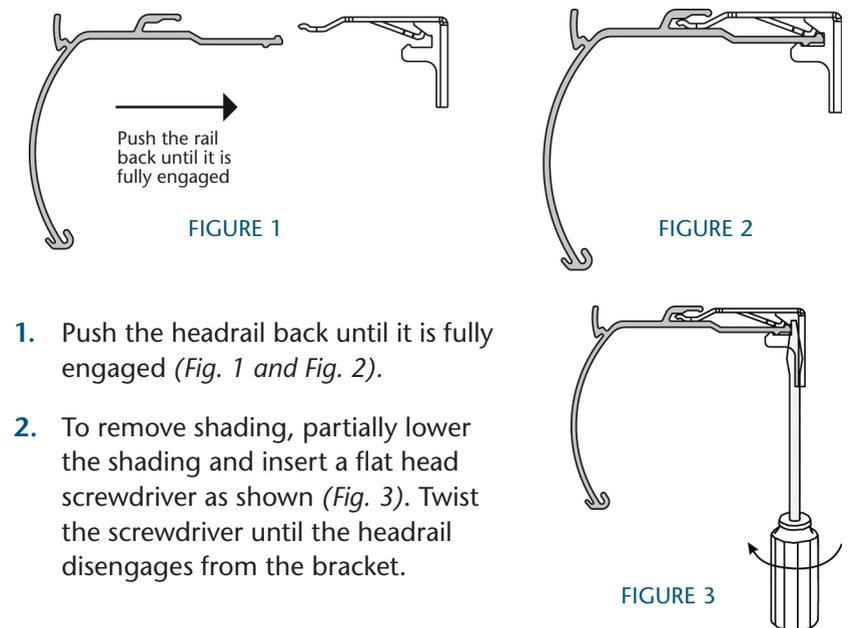

1. Push the headrail back until it is fully engaged (Fig. 1 and Fig. 2).
2. To remove shading, partially lower the shading and insert a flat head screwdriver as shown (Fig. 3). Twist the screwdriver until the headrail disengages from the bracket.